



Testo 552 - Vacuumstick

Instruction manual



Content

- 1 Safety and waste disposal 3**
 - 1.1 About this document 3
 - 1.2 Safety 3
 - 1.3 Waste disposal 4
- 2 Technical data 4**
- 3 Description of the instrument 6**
 - 3.1 Use 6
 - 3.2 Instrument overview 6
 - 3.3 Displays overview 7
 - 3.4 Control keys overview 8
 - 3.5 Connection options overview 9
- 4 Operation..... 10**
 - 4.1 Connecting 10
 - 4.2 Switching instrument on and off..... 11
 - 4.3 Switching background illumination on and off 11
 - 4.4 Setting units and AutoOff 12
 - 4.5 Displaying temperature values 15
 - 4.6 Field calibration 15
 - 4.7 Calibration with reference vacuum gauge 16**
 - 4.8 Operating as a probe on the testo 570..... 16
- 5 Maintenance 17**
 - 5.1 Changing batteries 17
 - 5.2 Cleaning the instrument..... 18
- 6 Tips and assistance 19**
 - 6.1 Questions and answers 19
 - 6.2 Accessories and spare parts 19

1 Safety and waste disposal

1.1 About this document

- The instruction manual is an integral part of the instrument.
- Keep this document throughout the entire operating life of the instrument.
- Always use the complete original instruction manual.
- Please read this instruction manual through carefully and familiarise yourself with the product before putting it to use.
- Pay particular attention to the safety instructions and warning advice in order to prevent injury and damage to the product.

1.2 Safety

General safety instructions

- Only operate this instrument in the proper manner, for its intended purpose and within the parameters specified in the technical data.
- Do not apply any force to open the instrument.
- Do not operate the instrument if there are signs of damage at the housing, mains unit or connected cables.
- Always comply with the locally valid safety regulations when carrying out measurements. Dangers may also arise from objects to be measured or the measuring environment.
- Do not store the product together with solvents.
- Do not use any desiccants.
- Only perform maintenance and repair work on this instrument that is described in this documentation. Follow the prescribed steps exactly.
- Use only original spare parts from Testo.



Batteries

- Improper use of batteries may cause the batteries to be destroyed, or lead to injury due to current surges, fire or escaping chemicals.
- Only use the batteries supplied in accordance with the instructions in the instruction manual.
- Do not short-circuit the batteries.

- Do not take the batteries apart and do not modify them.
- Do not expose the batteries to heavy impacts, water, fire or temperatures in excess of 60 °C.
- Do not store the batteries in the proximity of metal objects.
- Do not use any leaky or damaged batteries.
- In the event of contact with battery acid: rinse affected areas thoroughly with water, and if necessary consult a doctor.
- Take batteries out of the instrument immediately if they are not functioning properly or if they show signs of overheating.
- Remove all batteries from the instrument if it is to remain unused for a longer period.

Warnings

Always pay attention to any information denoted by the following warnings. Implement the precautionary measures specified!

Display	Explanation
 WARNING	Indicates possible serious injury.
 CAUTION	Indicates possible minor injury.
ATTENTION	Indicates possible damage to equipment.

1.3 Waste disposal

- Dispose of faulty rechargeable batteries and spent batteries in accordance with the valid legal specifications.
- At the end of its useful life, dispose of the instrument via separate collection for electro- and electronic devices. Please observe local regulations concerning waste disposal. Or alternatively return the product to Testo for disposal.

2 Technical data

Feature	Values
---------	--------

Feature	Values
Absolute pressure sensor (absolute)	max. 6 bar (87 psi)
	ATTENTION
	Pressure exceeded. Destruction of the absolute pressure sensor! - Do not exceed the maximum value.
Vacuum measuring range	1100 - 0 mbar / 825080 - 0 micron
Sensor overload (relative)	5 bar / 72 psi
Vacuum resolution	0.01 hPa / 10 micron
Vacuum accuracy (at 22 °C, after field calibration, confidence level 95%)	<ul style="list-style-type: none">- 0 to 1.33 hPa / 0 to 1000 micron: up to ±10 micron- 0 to 200 hPa / 0 to 150000 micron: ±0.3% FS = ±0.6 hPa- 200 to 1100 hPa / 150000 to 825080 micron: ±0.3% FS = ±3.3 hPa
Operating temperature	-20 to 50 °C / -4 to 122 °F
Storage temperature	-20 to 50 °C / -4 to 122 °F
Temperature measuring range	-20 to 50 °C / -4 to 122 °F
Temperature resolution	0.1 °C / 0.1 °F
Battery life	2400 h (2x AA) (approx. 130 h with background illumination activated)
Protection class	IP 42
Parameter	mmHG, Torr, mbar, hPa, micron, inH2O, inHg. Pa
Measuring cycle	0.5 sec
Sensor	1× absolute pressure sensor
Connections	<ul style="list-style-type: none">- 2× 7/16" UNF- 1x MiniDIN (t570)
Warranty	2 years Warranty terms: see website www.testo.com/warranty

Einstellwerte Alarmgrenze

Einheit	Einstellbereich	Auflösung
mbar / hPa	0 - 7,5	0,05
micron	0 - 7500	50

3 Description of the instrument


3.1 Use

The testo 552 is a digital vacuum gauge for the precise measurement of extremely small pressures in the vacuum range. This allows you to monitor the evacuation (usually during commissioning) of refrigeration systems and heat pumps.

With the testo 552, you can therefore measure the current pressure in a refrigeration system, and thus gather information about the degree of dehumidification and the removal of foreign matter (oils, foreign gases, etc.).



A vacuum gauge is always used in conjunction with a vacuum pump (generates the vacuum). A manifold (analogue or digital) is also often used in order to obtain controlled access to the refrigeration system.

3.2 Instrument overview

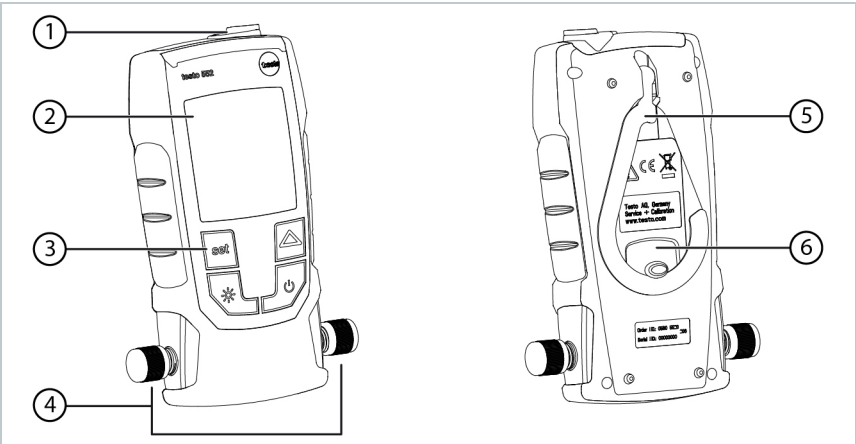

Element	Function
1 MiniDIN probe socket	Cable connection for connecting to the testo 570.
2 Display	Displays instrument status icons, measuring units and measuring values.
3 Control keys	Instrument operation.
4 Connections 7/16" UNF, brass	Connection of refrigerant hoses, vacuum pump, manifolds, etc..
5 Hook	Suspension device
6 Battery compartment	Contains two AA batteries.

3.3 Displays overview

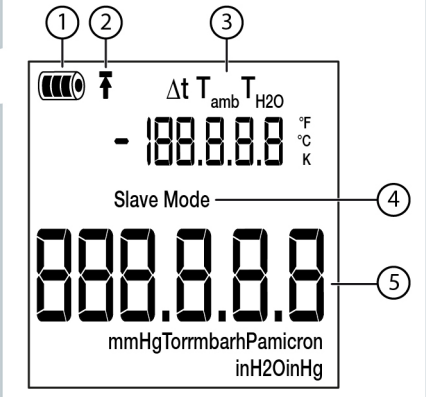

Element	Function
1 Icon [🔋]	Displays the remaining battery capacity. 🔋 >75% 🔋 >50% 🔋 >25% 🔋 <10%
2 Icon [⬆]	An alarm threshold is set.

3.5 Connection options overview

i In regard to the following connection options, the testo 570 is used to represent any manifold and can use the testo 552 as a probe via a MiniDIN connecting cable (see Option 2).

Option 1 (recommended)

i The testo 552 is connected at the point that is furthest from the vacuum pump. This ensures that a sufficiently deep vacuum is generated throughout the system in order to remove any moisture or foreign gases that may be present.



Option 2




Option 3



Option 4



Option 5

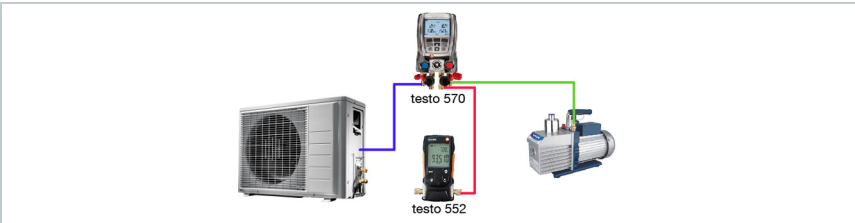

4 Operation

4.1 Connecting




Always use refrigerant hoses that are specifically intended for evacuations.

- 1 - Remove sealing caps.
- Connect the testo 552 to the circuit.




4.2 Switching instrument on and off

- 1 - Press .
- ▶ The instrument switches on or off.




4.3 Switching background illumination on and off

- 1 - Switch the instrument on.
- Press .
- ▶ The background illumination switches on or off.



4.4 Setting units and AutoOff

 The set-up menu must always be completely navigated through, even if only one parameter needs to be changed.


1 - Switch the instrument on.



2 - Press **set** to change settings.



3 - Press **Δ** to set the pressure unit required.

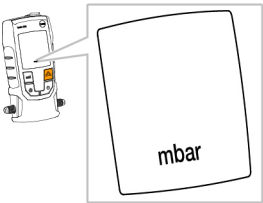


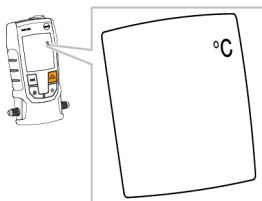
4 - Press **set**.

▶ The unit is set.



- ▶ The display shows the temperature unit.

- 5 - Press  to set the temperature unit required.




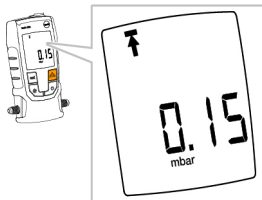
- 6 - Press **set**.

- ▶ The temperature unit is set.
- ▶ The display shows the setting for the alarm threshold.



Adjusting the alarm threshold causes an alarm to be triggered when the set value is exceeded.

- 7 - Press  to set the alarm threshold.



- 8 - Press **set**.


- ▶ The alarm threshold is set.
- ▶ The display shows the AutoOff setting.






If AutoOff is activated, the instrument switches off after 2 hours in which no buttons are pressed.

- 9 - Press  to switch AutoOff on or off.

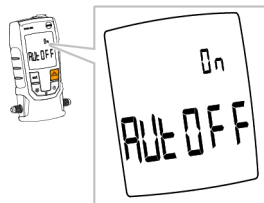

- 10 - Press **set**.

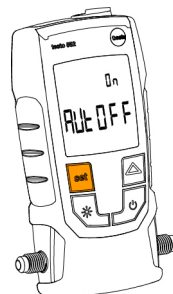

- ▶ All settings are stored.
- ▶ The display changes to the measuring mode.
- ▶ The instrument can now be used.




4.5 Displaying temperature values

- 1 - Press Δ to change the temperature measurement parameter.

► The temperature measurement parameter switches between TH2O, Tamb and t.

i t is displayed in K for °C, and in °F for °F.

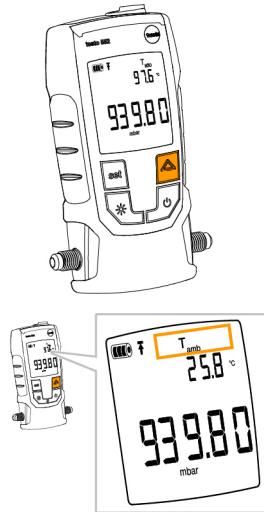

4.6 Field calibration



- Field calibration should be carried out at <15 hPa, field calibration is not possible at ambient pressure.
- The connected vacuum pump should ideally be able to create a minimum trace pressure of <0.1 hPa.
- Field calibration tunes the testo 552 to your vacuum pump.

- 1 - Connect the vacuum pump to a port of the testo 552.
 - Close the second port with the sealing cap.
 - Start the vacuum pump.
 - 2 - Wait until minimum pressure is reached.
 - Press **set** and Δ at the same time for at least 3 seconds.
- The testo 552 is zeroed and field calibration is completed.

4.7 Calibration with reference vacuum gauge








- Calibration should be carried out at <15 hPa (<11250 microns), calibration is not possible at ambient pressure.
- You need a reference vacuum gauge.

1

- Connect the vacuum pump to a port of the reference vacuum gauge
- Connect the testo 552 in parallel.
- Start the vacuum pump.

2

- Wait until minimum pressure is reached. (Duration approx. 2 min)
- Press  and  at the same time for at least 3 seconds.
- Using the  key, input the reading from the reference vacuum gauge (e.g. 150 microns/0.2 hPa).
- On the testo 552 press  and  at the same time for at least 3 seconds.

▶

The testo 552 is calibrated and calibration is completed.

4.8 Operating as a probe on the testo 570

The testo 552 has no save or transmission function of its own.

By connecting the testo 552 to the testo 570, the data is transferred to the testo 570. From there the data can be saved or managed via the EasyKool software.



In combination with the testo 570, the testo 552 can be used as a high precision vacuum probe, if connected to the front of the testo 570 using the connection cable 0554 5520. The firmware version 1.09 or later must be installed for this.


Before connecting both instruments, the testo 552 must be switched on and the same pressure unit must be set on both instruments.

The testo 570 will only connect to the testo 552 once the Evacuation mode has been activated. When used as a probe, the testo 552 cannot be operated, all keys are deactivated.

In order to be able to use the readings from the testo 552 via the testo

570 in the EasyKool software, you need EasyKool software version 4.0 or later.


- 1 - Connect the connecting cable to the MiniDIN probe socket of the testo 552.
- 2 - Connect the connecting cable to the front-end MiniDIN probe socket of the testo 570.
- 3 - On the testo 570 set Evacuation mode.
 - ▶ The testo 552 switches to Slave mode.
 - ▶ The keys of the testo 552 are deactivated.
 - ▶ The readings are transmitted to the testo 570.
- 4 - Remove the connecting cable.
 - ▶ The testo 552 exits Slave mode.

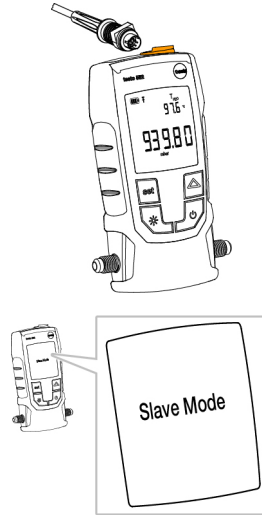

5 Maintenance

5.1 Changing batteries

- 1 - Switch the instrument off.
- 2 - Flip hook up.
- 3 - Open the battery compartment.
- 4 - Remove batteries.
- 5 - Insert new batteries, observing the indications inside the battery

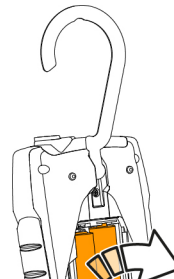

- compartment.
- Close the battery compartment.
- Fold hook down.

ATTENTION

**Aggressive cleaning agents or solvents.
Sensor may be damaged!**

- The sensor should not be cleaned.

**Aggressive cleaning agents or solvents.
Sensor may be damaged!**

- The sensor should not be cleaned.


Aggressive cleaning agents or solvents.

**Aggressive cleaning agents or solvents.
The instrument may be damaged!**

- Only clean the instrument housing.
- Use mild household cleaning agents or soapy water.

- ✓ - Close the connections using the sealing caps.
- Close the battery compartment lid.

- 1 - Wipe the instrument housing with a damp cloth. Use mild household cleaning agents or soapy water for this.

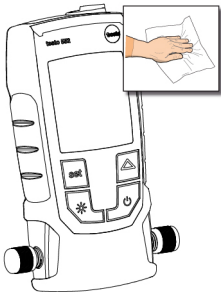

[Free 24-Hour Support](#) | [Request Demo](#) | [Contact Us](#)

For a full list of authors, please see the end of the article.

If we have not been able to answer your question, please contact your dealer or Testo Customer Service. You will find contact details on the back of this document or on the website www.testo.com/service-contact

www.burtonbooks.com

www.burtonbooks.com



— [testo.com](#) —

0970 5520 en 01

— [testo.com](#) —